




Step 2: Install this red part


Step 1: Remove this black nut

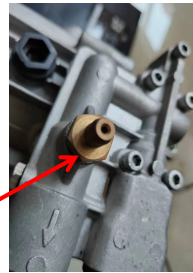

Step 3: Connect the part marked in red to the copper joint



Step 4: Install the spray nozzle

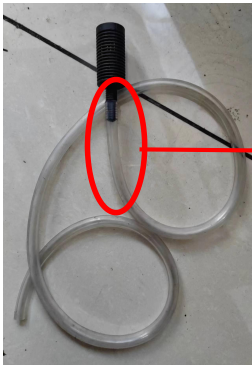

Step 5: Connect the black filter to the pipe